LAMP. MES INSTALLATION MANUAL FOR HES3D-120 CONCEALED HINGE


Thank you for using our product. Before installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- This product is a concealed hinge for indoor use that is recessed into door and doorframe.
- Three dimensional adjustment function allows vertical, horizontal, and depth adjustment.

DOOR SPECIFICATION

Min. Door thickness	29 mm
Max. Door weight	30 kg per 2 hinges, 40 kg per 3 hinges
Max. Door size	Width: 900 mm, Height: 2400 mm

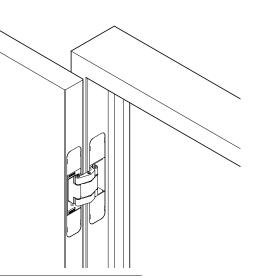

COMPONENT PARTS (PER BOX)

- Concealed hinge 2 pcs
- Screw cover 4 pcs×2 bags
- Template 1 pc
- Countersunk head tapping screw 5×20 4 pcs×2 bags

CUT OUT DRAWING FOR DOOR AND DOORFRAME

8

Hex Key 3 mm
1 pc

FOR YOUR SAFE WORK AND CORRECT INSTALLATION

Meaning of symbols

Warning Caution



! Caution: If not followed, injury or damage may result.


Provide a frame that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws and tighten them securely. If the mounting strength is insufficient, the door may fall and cause injury.


ODo not try to use this product for any other purposes other than originally intended for. Do not use the parts for applications that are out of specification.

Suse in conjunction with a door closer is not recommended. For soft-close option, we recommend Sugatsune LDD-V or LDD-S door damper. When using a door restrictor, please use HES3D-120-A100 instead.

- Follow the specified dimensions, specifications, and alignment of the cabinet. Warping, tilting or twisting of the cabinet or door may cause failure.
- This product is a part for architectural fittings. After installation, please check the function and safety of the final product. Please inform the end user how to use the product safely.
- Make sure to test the screws for slack at regular intervals (one month from first usage, half year and then one time every year is recommended).


INSTALLATION DRAWING (EXAMPLE)

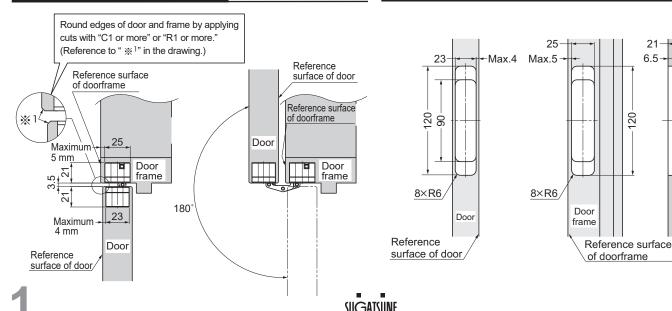

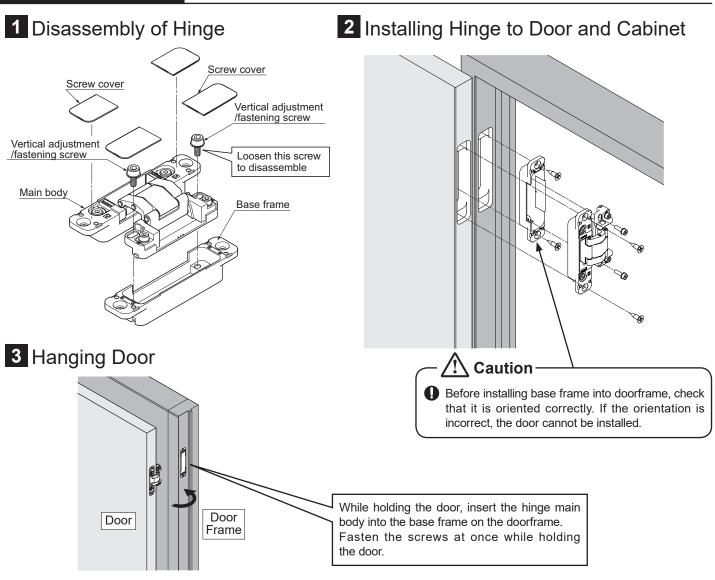

ADJUSTING DOOR POSITION

The arrows should point in the direction of adjustment when the door is closed

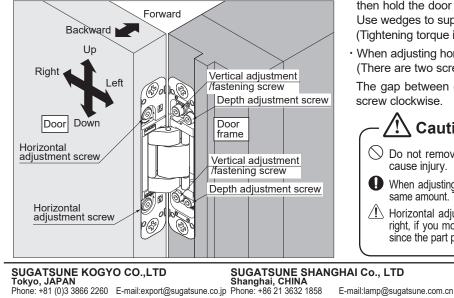

SUGATSUNE KOGYO (UK) LTD

Reading, UK Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

Mumbai, INDIA Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

Guangzhou, CHINA

Phone: +86 20 6639 3552

When adjusting the vertical position or the depth, loosen the screws, then hold the door at the suitable position and re-tighten the screws. Use wedges to support the door.

(Tightening torque is 3N·m.)

· When adjusting horizontal position, turn Horizontal adjustment screw. (There are two screws per hinge.)

The gap between door and frame will be expanded by turning the screw clockwise

'!\ Caution -

E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOGYO INDIA PRIVATE LIMITED

- \bigotimes Do not remove the depth adjustment screw. The door may fall and cause injury.
- Q When adjusting the horizontal position, turn the two screws a little, by the same amount. The hinge may be broken if you keep turning one screw only.
- Horizontal adjustment range is ±2 mm. When turning the screw to the right, if you move the part more than 2 mm, the cover cannot be put on, since the part protrudes. If you still turn the screw, the door will fall.

SUGATSUNE AMERICA, INC

California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Chicago, USA

Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

SUGATSUNE CANADA, INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

2021.07 1022-3