

ZION G4 Bi-Pin 4" Path Light

 
 
 


DESCRIPTION

The Zion 4" Path Light comes complete with a fully adjustable reflector top. It is available in a standard 22" fixed stem or a 17" to 28" adjustable stem.

ZION PATH LIGHT

Use	Path, Area, and Garden Accent Lighting		
Finish	Brass, Copper, or Brass w/ Black Cerakote®		
Includes	ABS Mounting Stake, LightingShrink Professional Crimp, and Heat Shrink Cable Connector		
Warranty	Lifetime Warranty on National Parks Series Fixtures		
Order With Lamp	Beacon G4 Bi-Pin, 2W, 2700K	FIXED ZION-PL-4-G4-CU-F ZION-PL-4-G4-BR-F ZION-PL-4-G4-BR-BLK-F	ADJUSTABLE ZION-PL-4-G4-CU-A ZION-PL-4-G4-BR-A ZION-PL-4-G4-BR-BLK-A
Order Without Lamp	Fits G4 Bi-Pin	FIXED ZION-PL-4-G4-CU-F-NL ZION-PL-4-G4-BR-F-NL ZION-PL-4-G4-BR-BLK-F-NL	ADJUSTABLE ZION-PL-4-G4-CU-A-NL ZION-PL-4-G4-BR-A-NL ZION-PL-4-G4-BR-BLK-A-NL

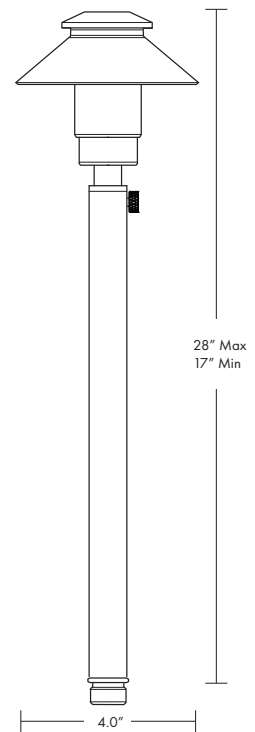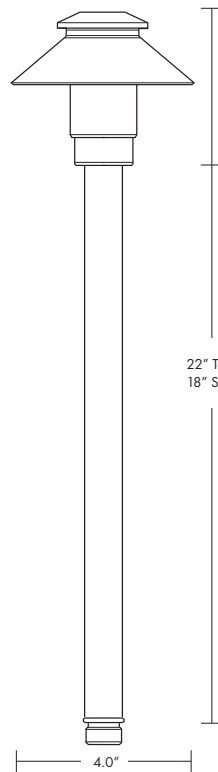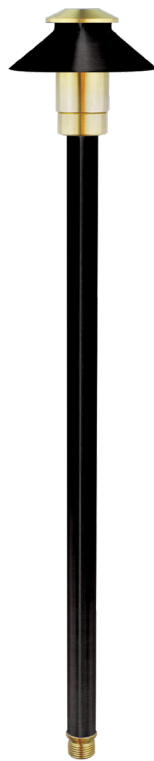

Brass (BR)



Copper (CU)



Brass + Black Cerakote®
(BR-BLK)

Fixed Stem Option (F)

Adjustable Stem Option (A)



ZION-PL-4-G4-CU-F

SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Connect the power cable from the fixture body to the landscape cable.
2. Lay the power cable into the slotted relief on the stake.
3. Press the fixture and stake into the ground.
4. Use a level to ensure the top of the stake is level with the ground.

HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE

1. Unscrew the fixture body from the stake.
2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
3. Use a level to ensure the top of the stake is level with the ground.
4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
5. Connect the power cable from the fixture body to the landscape cable.

ADJUSTING THE FIXTURE

1. Turn the threaded ring counter clockwise to loosen the lid.
2. Find the right light pattern by moving the lid up and down on the stem.
3. Turn the threaded ring clockwise to lock the lid into the desired position.
4. For adjustable stem models, adjust the stem length by loosening the set screw, adjusting the stem height, and tightening the set screw to hold it in place.

INSTALLING THE LAMP

1. Unscrew the threaded ring toward the stem.
2. Unscrew the lid from the stem.
3. Install the Beacon G4 Bi-Pin into the socket.
4. Screw the lid onto the stem.
5. Adjust the threaded ring until you achieve the light pattern you want.