


**Applications:** This slide is ideal for very heavy duty applications in environments subject to corrosion.

# **MODEL AL4140**

Aluminum Full Extension Up to 1,323 lbs. [600 kg] Load Rating\*\* Slides Sold Individually

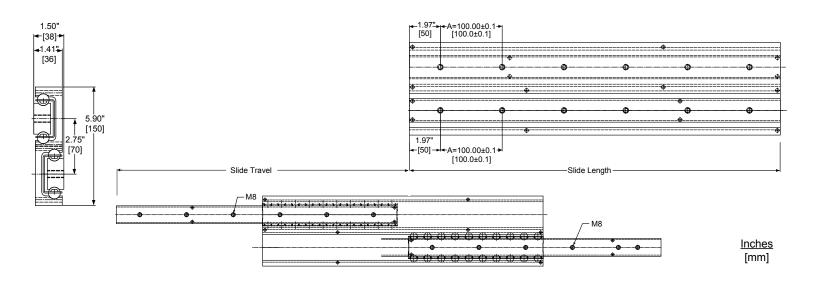

Finish: Aluminum (RoHS compliant)

**Lengths:** 16", 20", 24", 28", 32", 36", 40", 44", and 48" [400 mm, 500 mm, 600 mm,

700 mm, 800 mm, 900 mm, 1000 mm, 1100 mm and 1200 mm] \*

**Travel:** Full Extension **Height:** 5.90" [150 mm]

**Load Rating:** Frequent use: Up to 882 lbs [400 kg]\*

Moderate use: Up to 1,323 lbs [600 kg]\*\*

Side Space: 1.50" [38 mm]

Mounting: Side mount

Hardware: M8 screw (Not included)

Part Number	Slide Length	Travel	Α
AL4140-16	15.75 [400]	15.83 [402]	3 X
AL4140-20	19.69 [500]	21.38 [543]	4 X
AL4140-24	23.62 [600]	24.61 [625]	5 X
AL4140-28	27.56[700]	27.83 [707]	6 X
AL4140-32	31.50 [800]	33.89 [848]	7 X
AL4140-36	35.43 [900]	36.61 [930]	8 X
AL4140-40	39.37 [1000]	39.84 [1012]	9 X
AL4140-44	43.31 [1100]	45.39 [1153]	10 X
AL4140-48	47.24 [1200]	48.62 [1235]	11 X

- The lengths indicated in inches are approximate conversion from the metric measurements.
- "A" denotes hole pattern spacing.
- \* Load rating based on a pair of slides mounted 24" apart and tested at 10,000 cycles.
- \*\* Load rating is based on a pair of slides mounted 24" apart and tested for 5,000 cycles.


#### **Installation Instructions**





**Important:** Accuride recommends first pre-drilling all mounting holes. Align the slide as described below to pre-drill

- Position the outer member flush to the cabinet or rack opening. Mount the slide member (Figure 1 and Figure 2) to the cabinet or rack using M8 screws (not included). Screws are inserted through the cabinet or rack side wall and into the threaded holes on the slide. Be sure slides are parallel.
- Position the inner member flush to the front of the drawer or chassis. Mount the inner member using M8 screws. Screws are inserted through the drawer/chassis and into the inner member's threaded holes (Figure 3).
- Check slide alignment by opening and closing the drawer/ chassis. Any sign of binding indicates an issue with side space, alignment, or the cabinet and/or drawer are out of square. To adjust alignment, loosen the screws and adjust the slide position until movement is smooth. Retighten screws.
- Add screws to remaining holes. All fixing positions must be used to achieve maximum load rating. To ensure proper slide operation, all mounting screws must be inserted so that the screws do not interfere with slide movement. Use M8 screws.

**Note:** End stop testing is 10 cycles with a load of 882 lbs. [400 kg] at 2.62 f/s [.8 m/s]. Accuride recommends additional external stops be put into place.

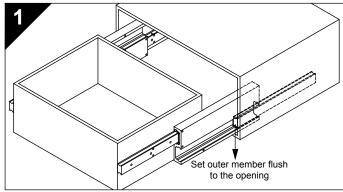

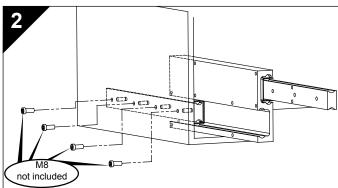


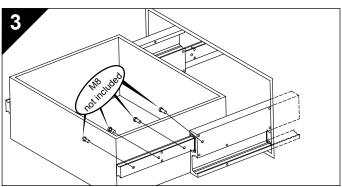

For the most current technical information please visit www.accuride.com.

## **Slide Ordering Instructions**

Complete your slide order for model AL4140 by specifying the following information:



## **Specifications**

Slide Members: Aluminum
Ball Retainers: Stainless Steel
Ball Bearings: Stainless Steel
Aluminum finish is RoHS compliant

**NOTE:** Specifications, materials, prices, terms, and delivery are subject to change without notice.

#### **Packaging**

**Bulk Pack:** All Lengths are packaged one slide per box. Packaging includes one slide and a technical sheet. **Fasteners are not included.** 

**NOTE:** We recommend that quality grease, rated for extreme pressure is re-applied at 2,000 cycle intervals.



Accuride International Inc.

12311 Shoemaker Avenue Santa Fe Springs, CA 90670

TEL (562) 903-0200 FAX (562) 903-0208 Manufacturing, Engineering, and Sales
United States • Germany • Japan •
Mexico • United Kingdom • China

For the most current technical information visit www.accuride.com

⚠ WARNING: This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.